
81005 ASSEMBLY INSTRUCTIONS

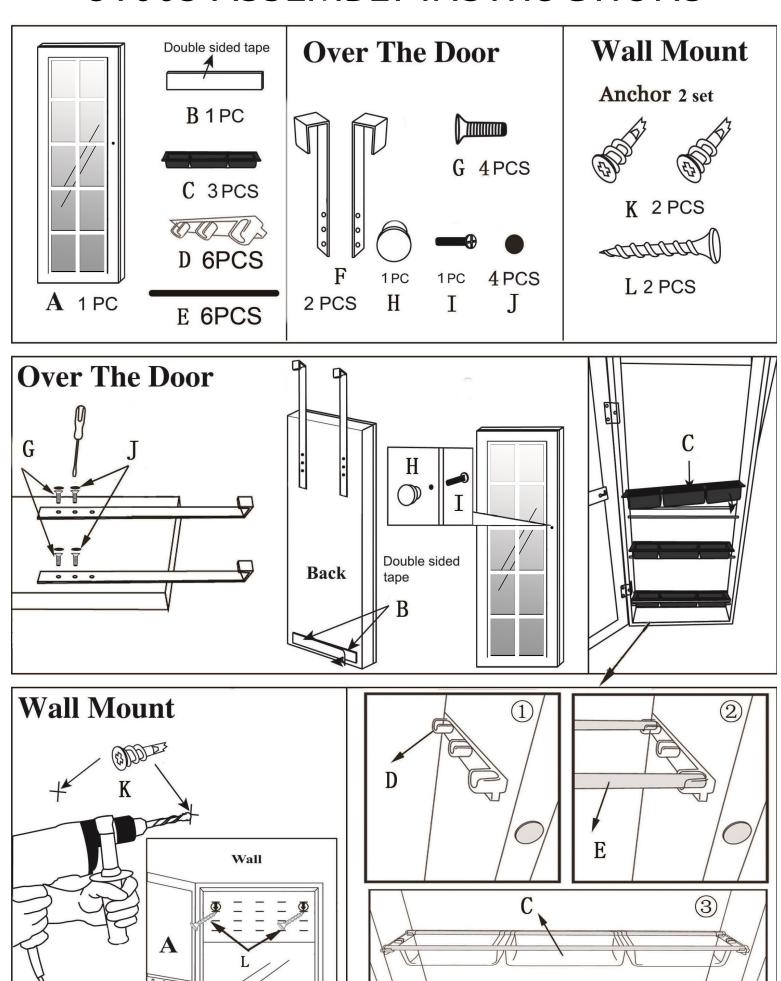


HANGING INSTRUCTIONS Read these instructions carefully. Failure to follow these instructions can result in serious personal injury.

Over the door hanging instructions:

- Determine your preferred height for hanging and position hooks to 1. align with the corresponding hole
- 2. Before screwing the hooks onto the back of the cabinet make sure that the top of the hook is facing towards the door. (Fig A)
- 3. Screw in all 4 screws tightly to secure the hangers to the back of the cabinet
- 4. Place EVA foam dot on each of the 4 screw on the back of the cabinet
- Hang the cabinet over your chosen door 5.
- 6. Determine desired location for Velcro strips
- Place one side of the Velcro strip to the back of the cabinet and the 7. other side to the door to minimize movement of the cabinet on the door
- Enjoy your new Cabinet! 8.

DOOR HANGING HARDWARE



4 Screws for Door Hangers

Fig A. Hooks facing towards door

Wall hanging instructions:


- Place 1 EVA foam dot on each back corner of the cabinet 1.
- 2. Determine your desired hanging location of the cabinet and mark where screws should go.
- 3. Place wall anchors into the wall at marked spots; make sure anchors are level.


<u>Drill</u> hole at least 1/4" deeper than the anchor. (Requires 3/16 Drill bit) **Insert** anchor until flange is flush with base material.


Fasten Screws through the back panel, from the interior of the cabinet and into the wall anchors In the wall.

- Do not exceed 35 lbs in over all weight. 4.
- 5. Enjoy your new Cabinet!



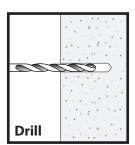

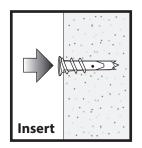

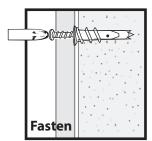

place screw through drill hole and tighten into anchor

^{*} Different wall materials may require a different type of fastener. Use fasteners suitable for the walls in your home.* Designed for fastening in drywall and hollow block. Manufacturer shall not be liable for any fastening failure due to improper installation or defective substrate material.