

FIRSTIME & CO.<sup>®</sup>  
— AMERICAN DESIGNED —

# INSTRUCTION MANUAL




81010 Cecelia Arch  
Jewelry Organizer

# 81010 ASSEMBLY INSTRUCTIONS


Read these instructions carefully. Failure to follow these instructions can result in serious personal injury.

1. Align storage compartment with the corresponding hole.  
From the back, screw compartment onto front of the mirror panel. (Fig A)

Fig A. Screw compartment bar to the front of the Panel

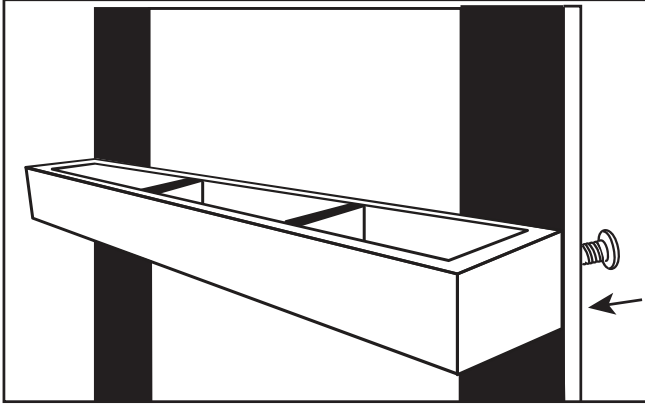


INCLUDES




2 Screws and compartment bar

2. Align hook bar with the corresponding hole.  
From the back, screw small hook bar onto front of the mirror panel. (Fig B)

Fig B. Screw hook bar to front of the Panel

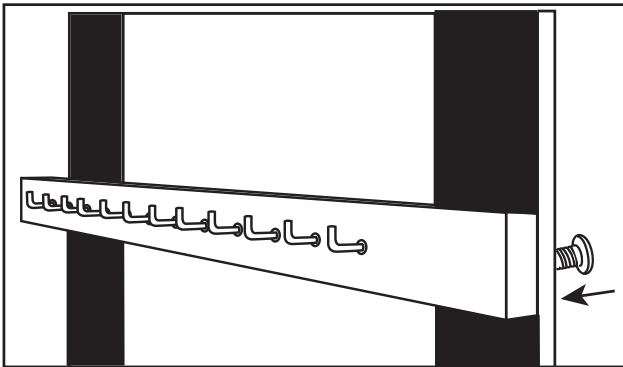


INCLUDES




2 Screws and Hook bar

3. Align bangle bar with the corresponding hole.  
From the back, screw both U hooks onto front of the mirror panel. (Fig C)

Fig B. Screw compartment bar to the front of the Panel

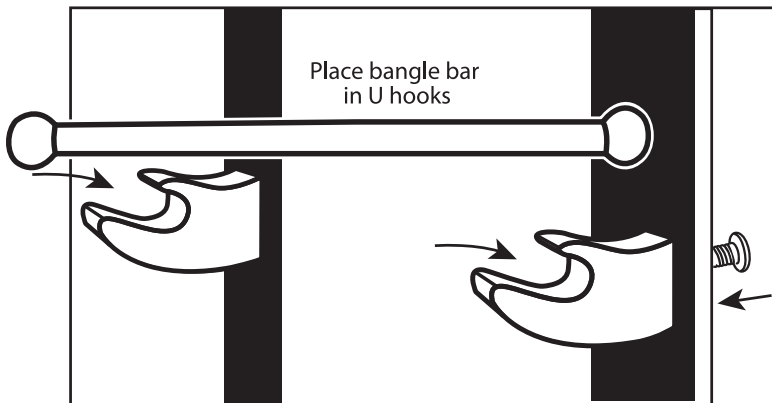

INCLUDES



4 Screws, 2 U hooks and a bangle bar


# 81010 HANGING INSTRUCTIONS

Read these instructions carefully. Failure to follow these instructions can result in serious personal injury.


## OVER THE DOOR HANGING INSTRUCTIONS:

1. Determine your preferred height for hanging, and position hooks to align with the corresponding hole.
2. Before screwing the hooks onto the back of the panel, make sure that the top of the hook is facing towards the door. (Fig D)
3. Screw in all 4 screws tightly to secure the hangers to the back of the panel
4. Hang the panel over your chosen door
5. Determine desired location for Velcro strips
6. Place one side of the Velcro strip to the back of the panel and the other side to the door to minimize movement of the panel on the door

Fig D. Hooks facing towards door

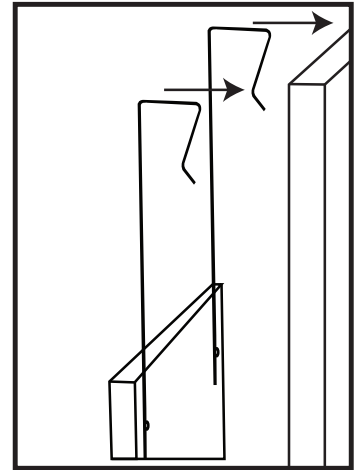

## DOOR HANGING

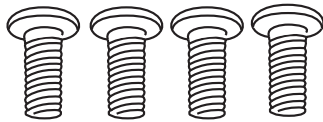


4 Screws for Door Hangers


## WALL HANGING INSTRUCTIONS:

1. Place 1 EVA foam dot on each back corner of the panel
2. Determine your desired hanging location of the panel and mark where screws should go
3. Place wall anchors into the wall at marked spots; make sure anchors are level. To install anchor, use a phillips head screwdriver and screw anchor into the wall. \* Different wall materials may require a different type of fastener. Use fasteners suitable for the walls in your home.\*
4. Do not exceed 10 lbs in over all weight.


## WALL HANGING

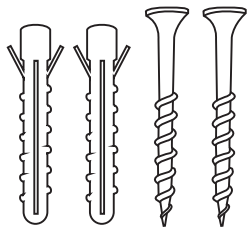


2 Wall Anchors & Screws

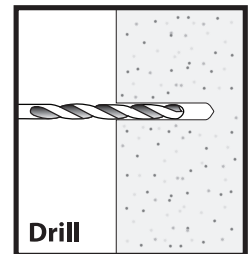

Drill

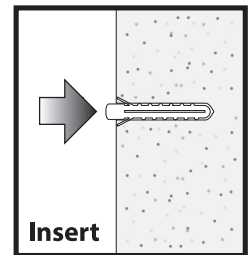

Insert

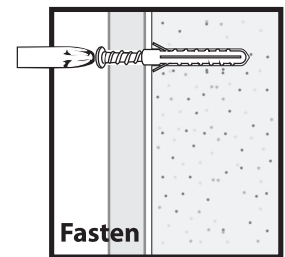

Fasten

place screw through drill hole and tighten into anchor